

## Article LCS-Temp

Article	Short description	Explanation
A040366	LCS-Temp Set	Device set for mobile indoor climate classification
A041113	LCS-Desk software option VDI2627	Software extension for measuring room classification for LCS-Desk

## Associated articles and extensions LCS-Temp

Article	Short description	Explanation
A043130	Panel-PC	Panel PC with touchscreen for wall mounting with pre-installed LCS-Desk software (LCS-Desk software option VDI2627 not included)
A040633		Transport case for LCS and sensors
A033188.x.x	TT-01	all TT-01 based temperature sensors
	SB-xx	all SB-22 and SB-3x sensor boxes with air pressure sensor and humidity sensor
A033189.x.x	WT-01	all WT-01 wireless temperature sensors with air or material temperature sensor
A040329	Tripod for WT-01	Tripod for temperature sensors in the corners of the room with sensor holders
A042331	SB-Splitter	for joint connection of an external humidity sensor; and a sensor box on the LCS climate station or UW-3x environmental module
A040099	TT-01 Hub, passive	Distributor and extension up to max. 3 m for up to 5 TT-01 on one connection
A040107	TT-01 Hub, active	Junction and active extension for up to 5 TT-01 to one connection, Cable length freely selectable up to 15 m
A040198	LCS-UW connection cable	LCS-UW connection cable: Connection between climate monitoring station (RS232); and SB input of an UW-3x environmental modul
A032612	LCS extension station	LCS Extension for use with LCS-01 or LCS-02; Extension station for max. 10 additional sensors TT-01