

PXY 16 series

xy – Piezo Scanner

- 16 x 16 μm^2 positioning / scanning area
- parallel high-resolution capacitive metrology
- 0.04 nm resolution
- excellent guidance accuracy
- parallel kinematics
- large \varnothing 66 mm aperture
- improved reliability and robustness

application:

- fast scanning applications, as well as nanopositioning and adjustment in the field of scanning microscopy, image processing, semiconductors, automation etc.

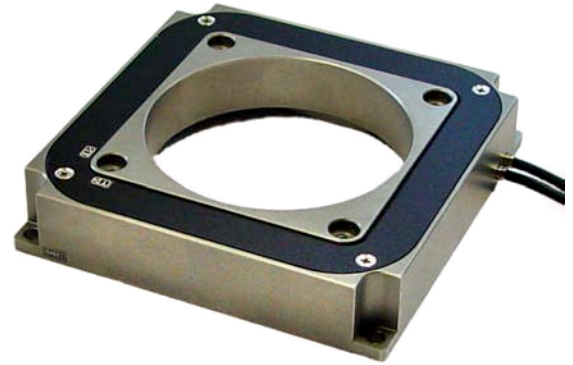


fig.: PXY 16 ENV

Concept

The PXY 16 is a biaxial linear stage with a scanning and positioning range of 16 x 16 μm^2 . With its wide opening, it allows to be used in a variety of optical applications.

The parallel kinematics optimized by FEM show an excellent and independent behaviour of both axes. Due to the high stiffness and robustness compared to conventional designs, the PXY 16 series offers the highest level of dynamics combined with excellent tracking accuracy.

On request, vacuum and low temperature modifications are available, as well as material variations like aluminium, invar, superinvar or titanium.

The optional sensor pre-amplifier ("external" / "digital" version) allows implementations independent of cable lengths.

Characteristics

In combination with high-resolution capacitive direct metrology from **piezosystem jena's**, the highest level of position accuracy, stability, linearity and repeatability is possible in closed loop operation.

In addition, the digital amplifiers from **piezosystem jena** allow the modification of various control parameters, including e.g. PID values and notch filter bandwidth. Using an internal wobble generator, mechanical resonances can be determined in order to eliminate them from the control signal via the notch filter adaptation to avoid the stimulation of resonances.

It is thus easy for the user to determine the optimal system setup via iterative trial and error operation, depending on the current load scenario.

Mounting/Installation

The force and expansion behaviour of piezo actuators is based on solid-body effects. Thus, the resolution is only dependent on the noise of the control electronics. Piezo actuators are neither influenced by nor do they generate magnetic fields. In cryogenic environments they work close to 0K with a linear decreasing relative expansion. Even under vacuum conditions, piezo actuators can be used. Both scenarios, however, need special adaptations. Due to the reduced dielectric breakdown field strength in air they do not work between 10 Pa and 10 kPa.

The grid with its thread holes and through holes allows easy integration of the piezoelectric element into a variety of standardized and customized applications.

PXY 16 series

technical specifications:

	unit	PXY 16 ENV	PXY 16 CAP	PXY 16 CAP external	PXY 16 CAP digital
part no.	-	S-644-00	S-644-06	S-644-06E	S-644-06D
axes	-	X and Y			
stroke open loop ($\pm 10\%$)*	μm	16			
Closed loop ($\pm 0,2\%$)*	μm	-	12		
electrical capacitance ($\pm 20\%$)**	μF	3.6 per axis			
feedback sensor	-	w/o	capacitive		
resolution*** open loop	nm	0.04	0.04		
closed loop	nm	-	1		
typ. repeatability	nm	-	5		
typ. nonlinearity	%	-	0.02		
resonant frequency add. mass = 10g	Hz	335			
add. mass = 130g	Hz	325			
add. mass = 360g	Hz	305			
add. mass = 540g	Hz	285			
stiffness (x / y / z)	N/ μm	10 / 10 / 15			
max. push / pull force open loop	N	200 / 50			
closed loop****	N	20 / 20			
max. loading	N	50			
max. lateral force	N	20			
tilt	x, y, z	μrad 5 / 5 / 5			
dimensions (l x w x h)	mm ³	98 x 98 x 20	104 x 104 x 20		
aperture	mm	Ø66			
voltage range	V	-20 ... +130			
connector****	voltage	-	LEMO 0S.302		d-sub
	sensor	-	LEMO 0S.650	ODU.4pol	
cable length****	m	1.0	1.6	2.0	2.0
temperature range	°C	-20 ... +80			
material	-	stainless steel			
total mass	g	725	900		

* measured with 30V300 CLE

** typical small signal strength behaviour

*** resolution is only limited by the noise of the amplifier and metrology

**** maximum load in controlled operation

recommended configuration:

actuator	1 x	PXY 16 CAP digital	S-644-06D
controller	1 x	NV 40/3 CLE	E-101-23
actuator	1 x	PXY 16 CAP	S-644-06
controller	2 x	ENV 300 CAP	E-270-600
power supply	1 x	ENT 400 (230V / 115V)	E-103-33 / 34
PC interface	1 x	EDA 4	E-202-40
casing	1 x	case 19" / 84 TE	E-103-911
actuator	1 x	PXY 16 CAP digital	S-644-06D
controller	2 x	EVD 50	E-720-300
casing	1 x	d-Drive case with EDS2 interface	E-751-000

PXY 16 series

drawings:

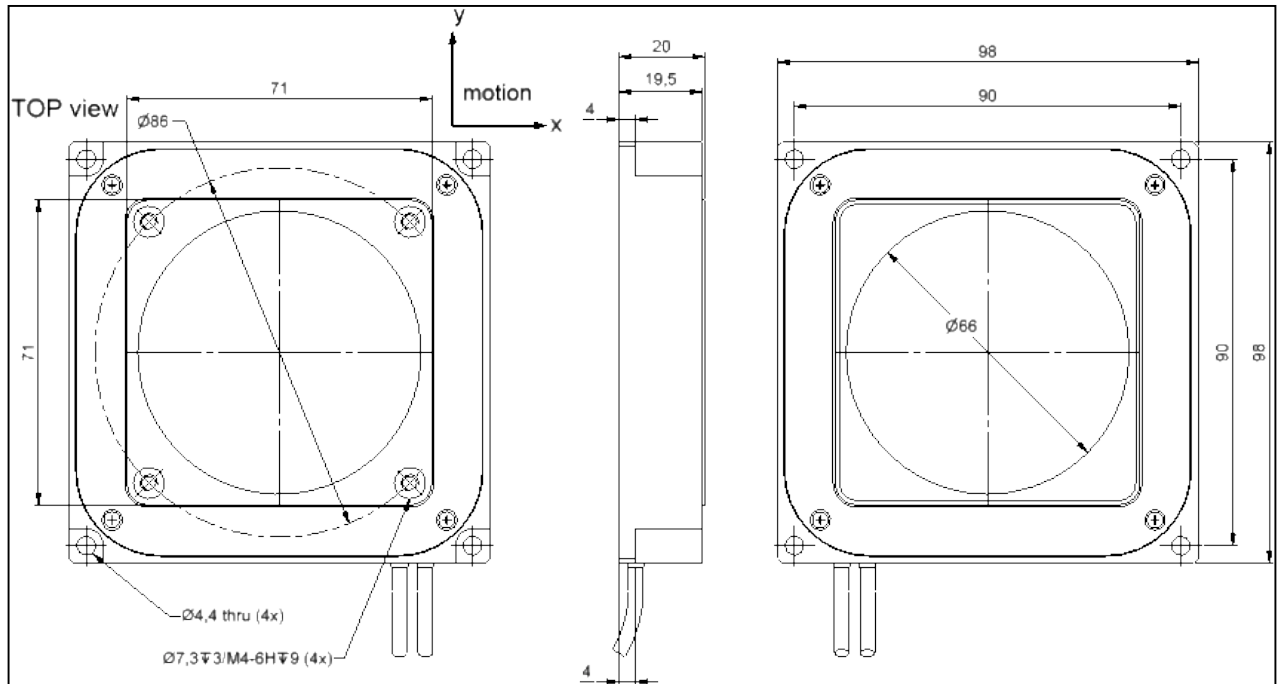


fig.: PXY 16 ENV

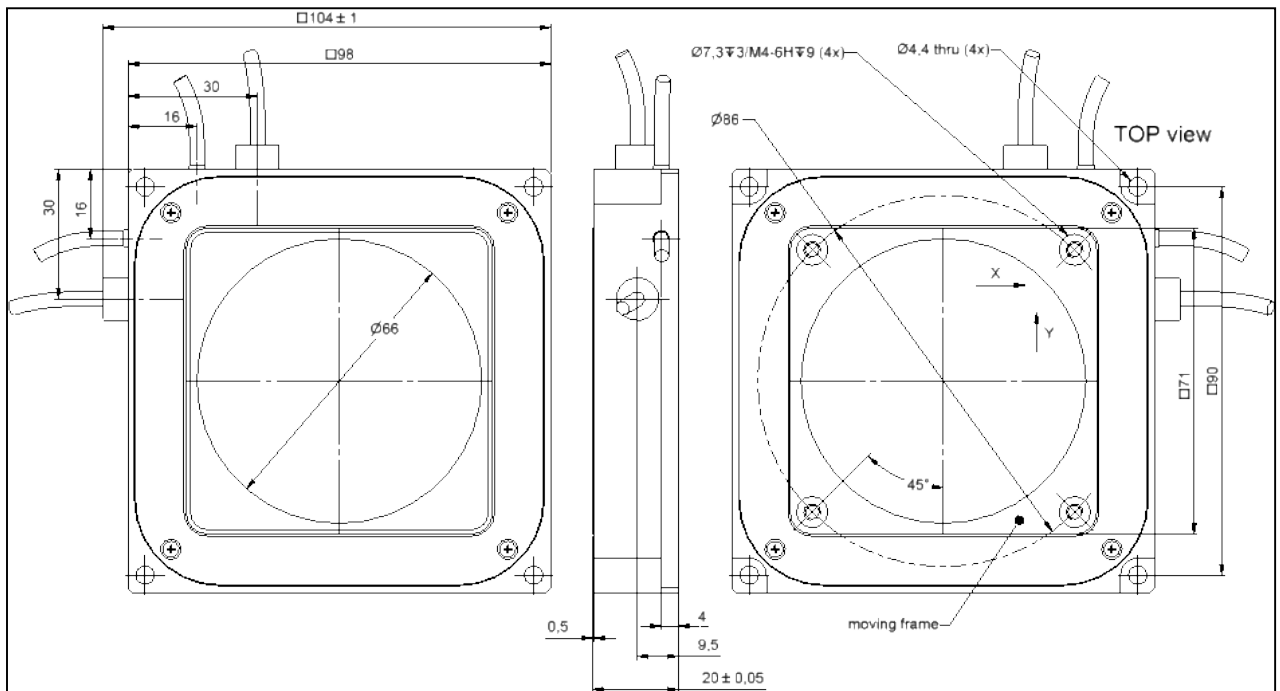


fig.: PXY 16 CAP / PXY 16 CAP extern / PXY 16 CAP digital

Please pay attention to the “handling instructions” you can download from our homepage.